

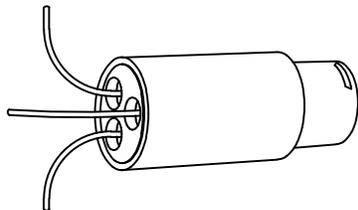



TO PUT CONTINUOUS TRACE WIRE UNDER BOLT, FIRST LOOSEN BOLT, THEN STRIP 3" MIN., WRAP ONCE AROUND BOLT, 1 TWIST, 2 WRAPS. "DO NOT CUT WIRE" TIGHTEN BOLT AFTER WRAPPING TRACE WIRE AROUND THE BOLT.

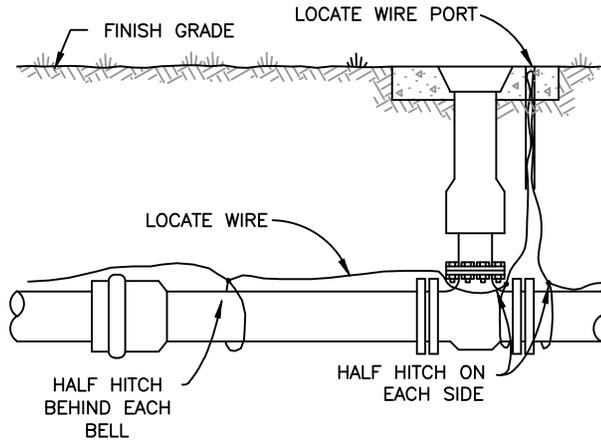

DETAIL OF THREE (3) WIRE SPLICE



CUTAWAY DETAIL OF A TWO (2) WIRE SPLICE

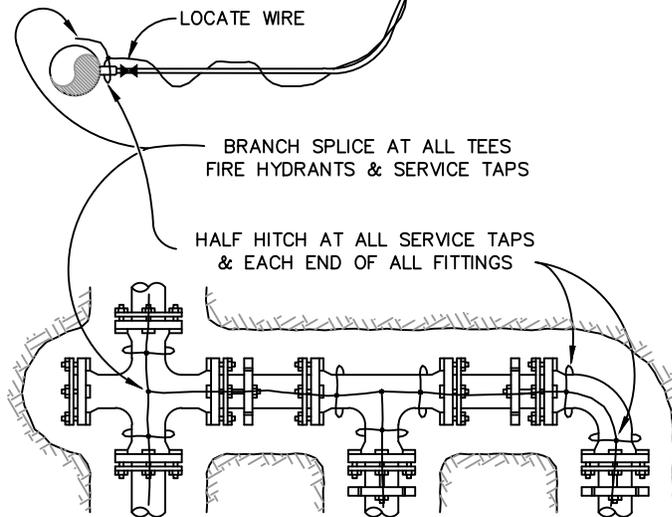

NOTES:

1. LOCATE WIRE IS REQUIRED ON ALL PIPE AS NOTED BY UTILITIES ENGINEER, AND SHOWN IN STANDARD DETAILS.
2. INCLUDE ALL COST OF MATERIAL & LABOR IN PRICE OF PIPE.
3. CONTRACTOR IS RESPONSIBLE FOR CONTINUITY OF ALL LOCATE WIRE.

LOCATE WIRE DETAIL



STANDARD UTILITY DETAILS
City of Stuart Public Works Department
121 S.W. Flagler Avenue, Stuart, Florida 34994
(772) 288-5300

**LOCATE WIRE
DETAIL**

DATE: OCTOBER 2016
FILE NAME: 2016 COS Std Details.dwg

SHEET NUMBER
34